


ExpressVote XL Navigation & Controls

Voters can either use the touch screen or the UVC to navigate the vote session. When using the touch screen, voters will touch the candidate name. The system displays a check mark and highlights the selection in green. If the ballot is too large for a single screen, touch **Next Page** or **Previous Page**.

The UVC controls are listed below:

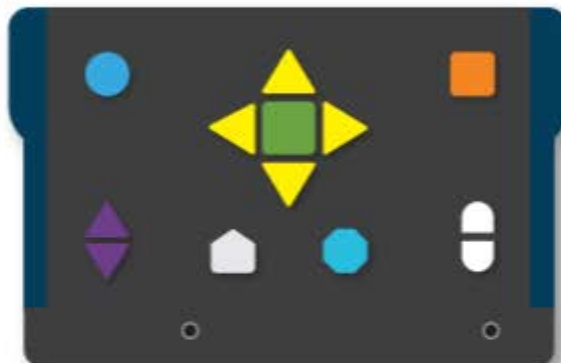

Button	Symbol	Function
Up	Yellow triangle	Moves the selector box to previous selection in a contest or option.
Right	Yellow triangle	Advances the selector box to the next contest or continues with the selected option.
Down	Yellow triangle	Moves the selector box to the next selection in a contest or option.
Left	Yellow triangle	Moves the selector box to the previous contest or cancels and returns from an option.
Select	Green square	Selects the highlighted item; activates UVC mode from the Help screen.
Info	Blue circle	Activates the Help screen.
Repeat	Orange square	Repeats the last spoken phrase of the audio playback.
Volume	Purple arrows	Adjusts the volume of the audio playback.
Home	White pentagon	Press once = return to top of contest or option. Double-press = return to first contest.
Pause	Teal octagon	Adjusts the audio speed.
Tempo	White half-ovals	Adjusts the audio level.